



INSTALLATION INSTRUCTIONS


OPERATING ACCESSORIES


EBG


Tools required: Hammer, drift punch Ø 3.5 mm

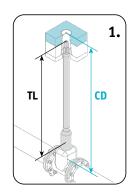


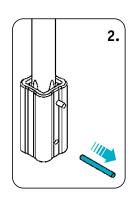


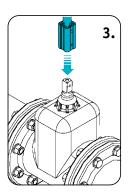

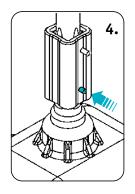

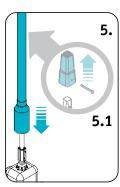

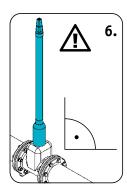

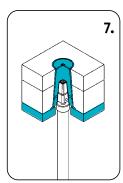

fixed

Assembling steps

- Match total length (TL) of spindle extension with required cover depth (CD) and verify nominal valve size.
- 2. Remove and store bolt from coupling socket.
- Mount spindle extension rod with coupling socket on valve spindle, aligning bore holes of coupling socket and valve spindle. (If necessary remove the valve's operating element first.)
- **4.** Connect coupling socket and valve spindle by use of the stored bolt.
- Bell tube first, thread protective tubing over spindle extension rod onto the top of the valve.
- 5.1 If necessary remove operating element by removal of its rivet first and store it. After assembly of protective tubing, re-attach operating element on top the spindle extension
- 6. Align spindle extension axially to the valve spindle and backfill with appropriate filling

 ↑ material (preferably compactable soil)
- During installation of the surface box, be sure to leave sufficient space for the operating element.